

# Fitting instructions for


# *Multi-Fit*

## General-purpose gate hinges

MFA Hinges come pre-tensioned at 1st setting for transport and identification. Please note how the "Adjustor Pin" is fitted for re-fitting. Remove "Adjustor Pins" from hinges. Keep in safe place!


### Standard Fitting. See Fitting Method #1

Fit "Angled Leaf" of hinges to gate using suitable fixings. Offer up gate to post and fit hinges using suitable fixings. Ensure the two large leaves are at right angles to each other around the post. Do NOT let the leaves creep apart, as you will create too much tension within the mountings, when you fit the inside face fixings. See Diagram "A"

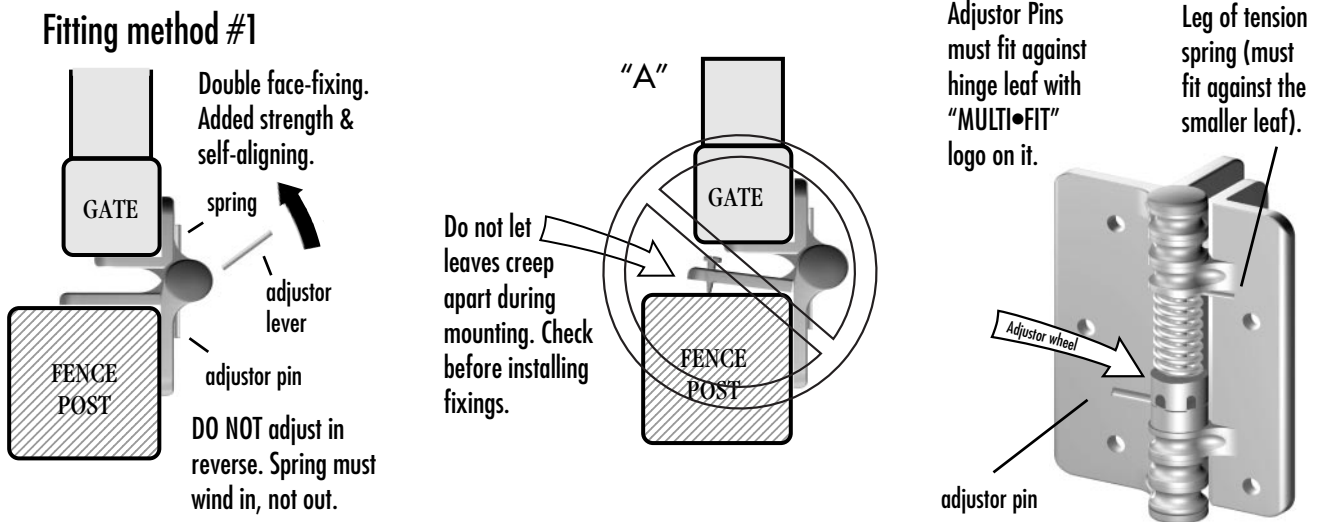

### Flush Fitting. See Fitting Method #2

Fit "Angled Leaf" of hinges to gate using suitable fixings. Open out the two large leaves and offer up gate to marked out position on wall and fit hinges using suitable fixings.

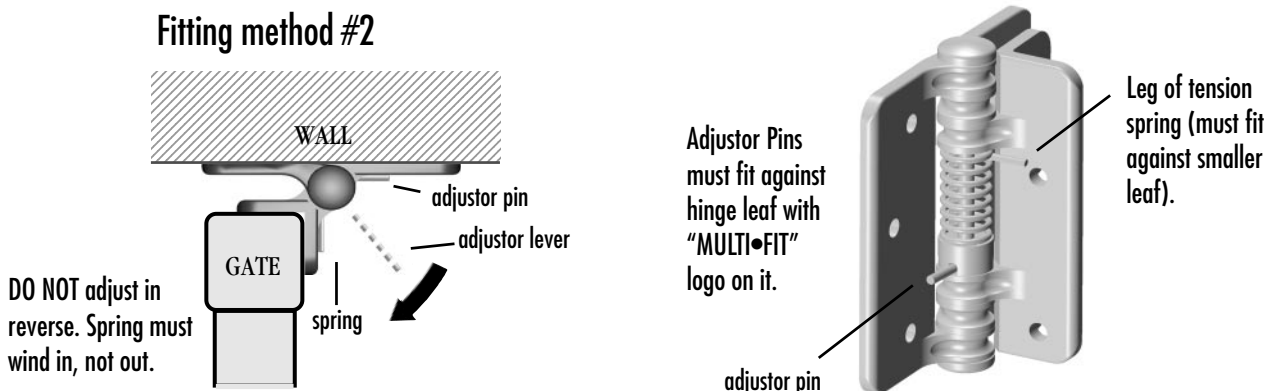

Once hinges are installed correctly, tension is then applied by inserting an "Adjustor Lever" into the "Adjustor" and rotating clockwise. Rotate until the leg on the spring comes into contact with the small leaf with no writing on it (usually the leaf fitted to the gate). With the flush mounting method you will need to use both "Adjustor Levers" to do the winding. From contact, wind up spring to 3rd setting and fit Adjustor Pin. Repeat for next hinge. Test gate for suitable operation. Note:- As in all tension adjustable systems, make certain a latch or gate stop is fitted to ensure the closing gate does not swing past the post damaging the hinges. Increase or decrease tension as required. Both hinges should be adjusted to the same settings at all times.